

CHAMP 15 G

PART NUMBER

~~049617~~ 002 # 1642
049618
049619
049620
049624
049625
049626
049627
049629
049631
049632
049633
050208
050209
050212
029912

DESCRIPTION

Control Volume A50K
Control Gain 1, Middle B10K
Control Gain 2 B250K
Control Bass B50K
Switch Power JRC 2102
Jack Input (Mono)
Jack Headphone (Stereo)
Fuse T500 MA
Handle Chrome
Screw Handle
Corner Chrome
Screw Corner
Knobs
Speaker
Power Transformer
IC-PC 1188

NOT AVAILABLE

Mini Dime
004 9/96 500K

CHAMP 15 on 10
GAIN CONT - 500K
TREBLE - 50K
VOL. - 500K

CHAMP 15 GR

PART NUMBER

049617
049618
049619
049620
049624
049625
049626
049627
049629
049631
049632
049633
050208
050209
050212
016795
029912

DESCRIPTION

Control Volume A50K
Control Gain 1, Middle B10K
Control Gain 2
Control Bass/Reverb B50K
Switch Power JRC 2102
Jack Input (Mono)
Jack Headphone (Stereo)
Fuse T500 MA
Handle Chrome
Screw Handle
Corner Chrome
Screw Corner
Knobs
Speaker
Power Transformer
IC-TL 072
IC-PC 1188

CHAMP 25 GR

IC 0029912
PC 1188H

PART NUMBER

DESCRIPTION

049617	Control Reverb/Volume (Drive) A50K
049618	Control Volume/Gain I/Middle B10K
049619	Control Gain 2 B250K
049620	Control Treble B50K
049621	Control Bass B25K
049624	Switch Power JRC 2102
049625	Jack Input/Footswitch (Mono)
049626	Jack Headphone (Stereo)
049628	Fuse TIA
049630	Handle Chrome
049631	Screw Handle
049632	Corner Chrome
049633	Screw Corner
022865	K-30 JFET Q 1,2,3,4
028890	Foot Switch
050208	Knobs
050211	Speaker
050213	Power Transformer

CHAMP 15 B

PART NUMBER

DESCRIPTION

049618	Control Middle B10K
049619	Control Treble B250K
049620	Control Volume B50K
049622	Control Bass A250K
049623	Control Presence C10K
049624	Switch Power JRC 2102
049625	Jack Input (Mono)
049626	Jack Headphone (Stereo)
049627	Fuse T500 MA
050208	Knobs
050211	Speaker
050214	Power Transformer
029912	IC-PC 1188